

CommercialBlindsDirect

Measuring Instructions - Recess Size

Step 1 – Width Measurement:

Measure the recess width in at least three places and use the smallest measurement when ordering. Be sure to check the width at the top of the recess as this is often the narrowest point.

Step 2 – Drop Measurement:

Measure the height of the recess at three different points and use the smallest measurement as the drop when placing your order.

Check for obstructions. If tiles or other features narrow the recess, measure between these points to find the narrowest width.

Step 3:

Select Recess Size when placing your order. We will make the necessary deductions for your blind to fit within the recess.

Notes:

The fabric on roller blinds will be **35mm narrower** than your recess width to allow for the brackets and mechanism.


Vertical Blinds will be **12mm narrower** than the recess width & drop

Venetian blinds will be **12mm narrower** than the width.

Curtain Walling:

If you intend to install the blinds inside the mullions; measure between the mullions and select **Recess Size** when ordering.

If you intend to install the blinds outside of the mullions; measure between the mullion centres and select **Recess Size** when ordering.

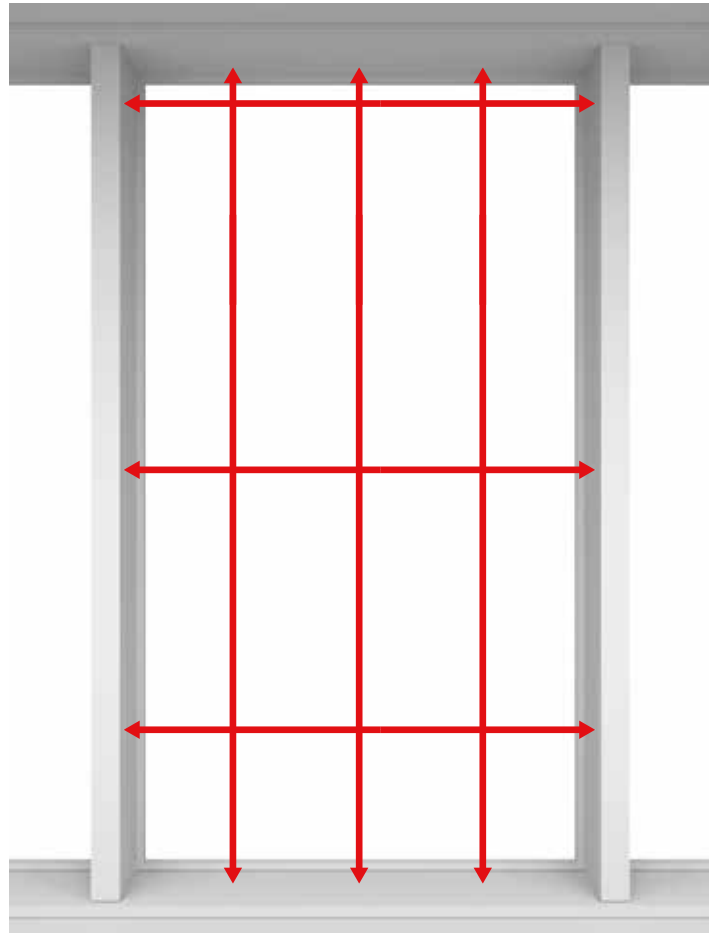

CommercialBlindsDirect

Measuring Instructions Blind Size


Step 1 – Width Measurement:

Measure the exact width you would like the blind to be. We will make the blind to this exact measurement.

If installing outside the recess; first determine how far you would like your blind to overlap your window recess on each side. We suggest 100mm on each side of the recess so add 200mm on to the width of the recess & select **Blind Size** when ordering.

The greater the overlap, the more effective your blinds will be at blocking light from outside.

Important: Check for any obstructions, such as any light switches or electrical points and ensure that no objects are likely to interfere with the operation of the blind.

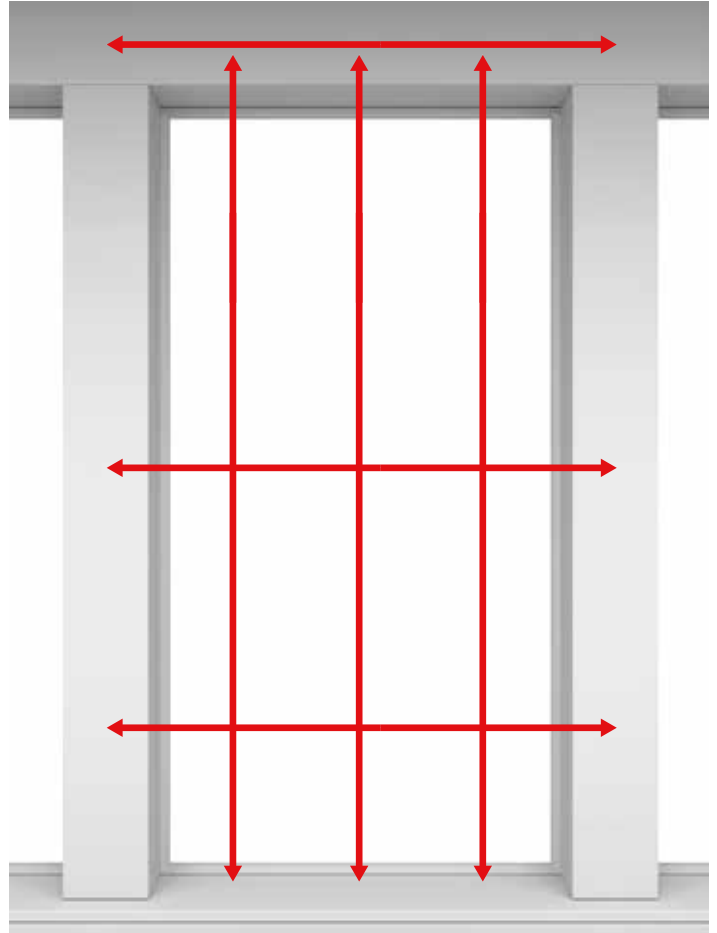

Step 2 – Drop Measurements

Measure the distance between the top of the blind and where you'd like your blind to finish at the bottom. This drop figure will represent the full height of the blind, including the roll or headrail.

If installing outside the recess; we suggest 100mm overlap at the top & bottom of the blind so add 200mm on to the height of the recess & select **Blind Size** when ordering.

Note: Look out for any obstructions, such as radiators or electrical points, that may limit your overlap.